

CHECK
to make sure all of the contents are in the box


REVIEW
the safety information in the User Manual

SETUP
your HDTV so that the rear connectors are accessible

INSTALL
included AAA batteries into the provided
Polaroid Remote Control

WRITE
down your HDTV's Model and Serial Number
(located on the back of TV)

Digital HD LED TV 40GSR3100F

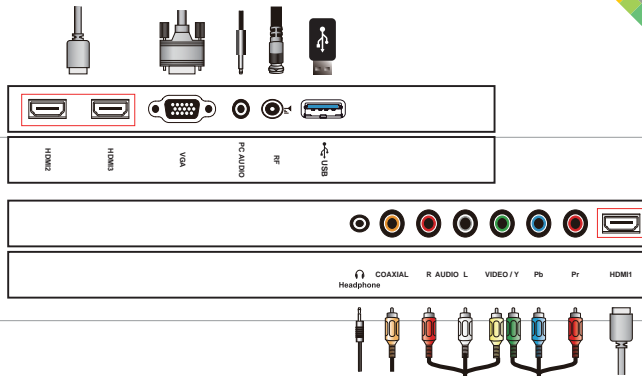

THREE WAYS TO GET HDTV

- 1) OVER-THE-AIR ANTENNA** – Connected to your HDTV through RF Cable / Antenna input.
- 2) HD CABLE BOX** – Subscribe to HD programming through your local cable company (HD cable box required).
- 3) HD SATELLITE** – Subscribe to HD programming through DirecTV, Dish Network, or other satellite provider (HD satellite receiver required).

For more information, see the "First time installation" in your User Manual.

**NEED HELP?
IT'S FREE!**

CALL
USA: 1-888-636-8599


CONTENTS



Remote Control & AAA Batteries
Warranty Card and Quick Start Guide

HDMI: THE BEST CONNECTION
We highly recommend you use the HDMI input whenever possible to receive an incredible High Definition picture. Please keep in mind, however, that not all A/V devices are capable of this type of connection.

For the best viewing experience, connect your TV to an HD digital cable/ satellite box, HD/ Blu-Ray DVD player and/or other HD A/V device using the HDMI connection. Make sure your external A/V devices are set to output an HDMI signal. Consult your A/V device's User Manual for instructions on how to output an HDMI signal.

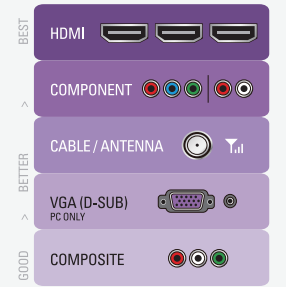

FOUR EASY STEPS FOR CONNECTING YOUR HDTV

1) CHOOSE A/V EQUIPMENT YOU WANT TO CONNECT TO YOUR HDTV

Select which types of **A/V Equipment** and **TV Signal Source** you want to connect to your HDTV.


The colored boxes in the **A/V Equipment** and **TV Signal Source** charts below indicate which type of connections you may use to connect to your HDTV

	A/V EQUIPMENT							TV SIGNAL SOURCE					
	DVD	DVR	Computer	Game System	Sound System	VCR	Digital Camera	Video Camera	Cable Box	Digital Cable Box	Satellite Box	Cable (Without Box)	Antenna
HDMI													
COMPONENT													
CABLE / ANTENNA													
VGA (D-SUB) PC ONLY													
COMPOSITE													

2) CHOOSE A/V CONNECTION METHODS

Using the colored boxes from STEP ONE, follow the row across to STEP TWO to match up the colored boxes to the same colored connection method.

Choose **ONLY** one connection method for each signal and piece of equipment.

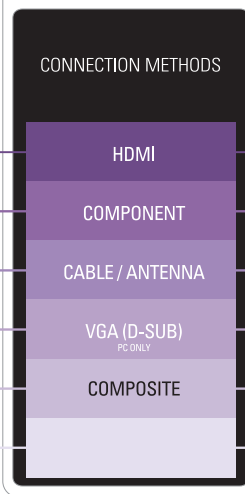


3) SELECT CABLES AND MAKE CONNECTIONS

Once you have chosen your preferred connection methods from STEP TWO, follow the row to STEP THREE to decide what kind of cables you need and what the connections look like on your A/V equipment.

Following the color-coded chart, use the appropriate cables and connect your **TV Signal Source** and **A/V Equipment** to the color-coded inputs on your HDTV. (Refer to the **Connection Map** at the bottom of the page.)

Once connected, turn on your HDTV and all your connected A/V equipment.

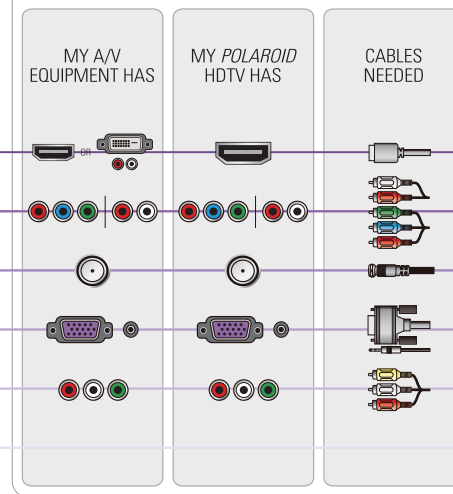

4) ENJOY YOUR HDTV!

Follow the "PROGRAM YOUR HDTV" section on the back of this Quick Start Guide.



QUICK START GUIDE

? Questions? Need some help? This manual will help you enjoy your new product

📞 If you still have questions, call our help line: USA: 1-888-636-8599

🌐 or visit us at: www.polaroidhdtv.com

Polaroid and Polaroid & Pixel are trademarks of P.L.R. IP Holdings, LLC, used under license. All other trademarks are the property of the respective owner, who has not sponsored, endorsed or approved this product. P.L.R. IP Holdings, LLC does not manufacture this product or provide any Manufacturer's Warranty or support.

This product is distributed and sold by: Empire Electronic Corporation 5550 Jurupa St, Ontario, CA 91761